

Startup package of automation system of ROBODRILL with robot

FANUC ROBODRILL Robot Package



Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81
Россия +7(495)268-04-70

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47
Казахстан +7(7172)727-132

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Киргизия +996(312)96-26-47

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

<https://fanuc.nt-rt.ru/> || fcu@nt-rt.ru

Features of **ROBODRILL Robot Package**

Quick and simple startup



- ROBODRILL and robot are connected.
- System up can be started immediately after delivery.

Sample programs



Robot interface 2 function



Monitor screen



 
Robot manual operation screen

- System operation and status check are available on ROBODRILL screen without additional control panel.
- Robot manual operation is available from ROBODRILL.


- Sample programs for automatic workpiece exchange are registered.
- Automatic operation can start after adjusting teaching position.
- Robot exchanges the workpiece by M code signal from ROBODRILL.

System configuration

ROBODRILL Robot Package

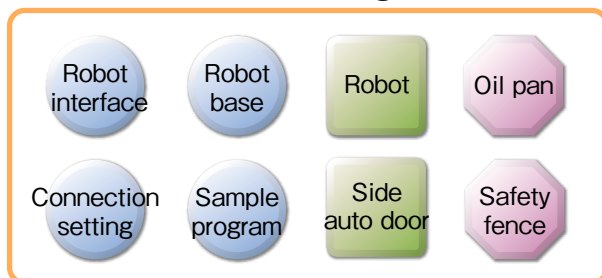


Arranged by customer

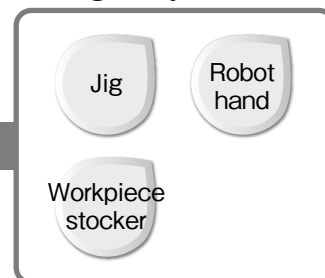 


- * As for the Robot, LR Mate 200iD, LR Mate 200iD/7L and LR Mate 200iD/14L are selectable.
- * Automatic side door drive type is selectable (air cylinder or servo motor).

 
Line-up

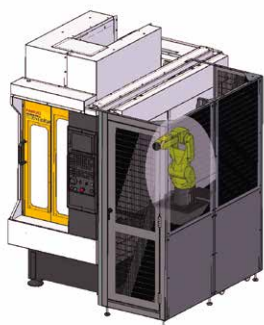

Side integrated type

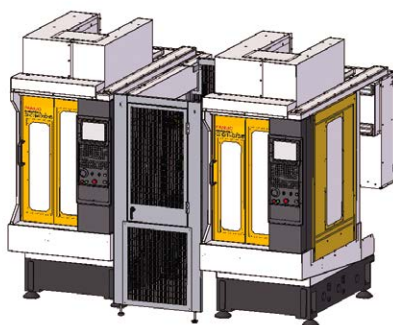 




Side integrated type
(two ROBODRILLS)

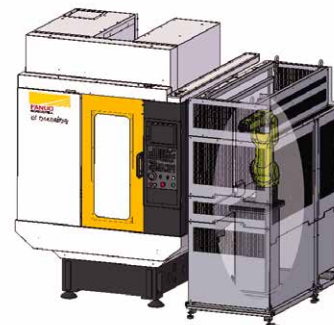 

Side standalone type




Outer Dimensions and Floor Plan

   Side integrated type (for X-axis stroke 300mm)

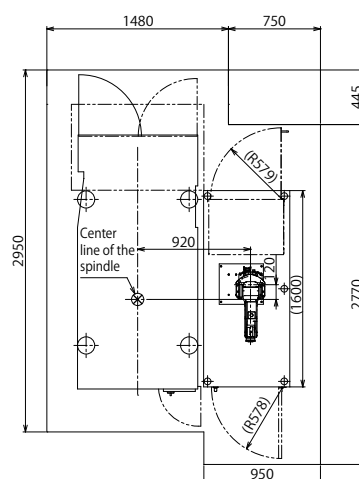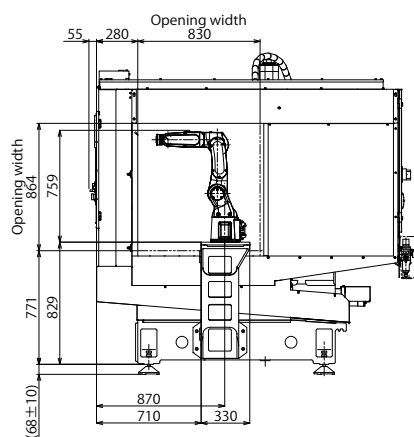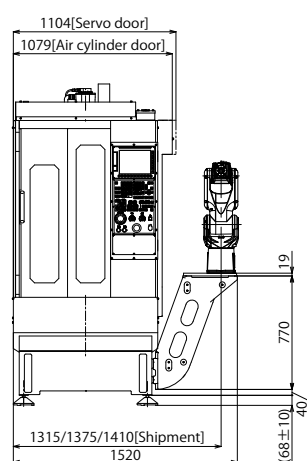

- * In the figure, LR Mate 200iD is mounted.
- * For further details, please contact FANUC.

   Side standalone type (for X-axis stroke 500mm)

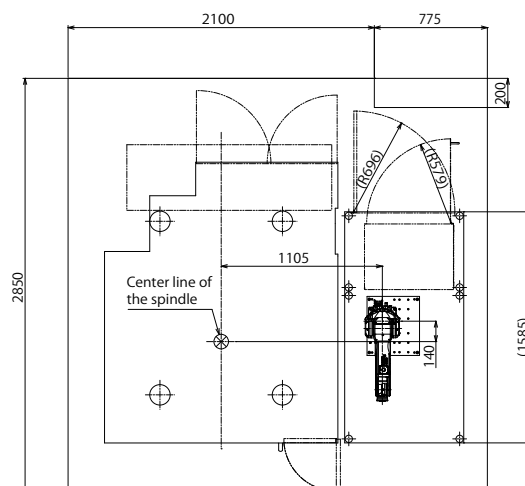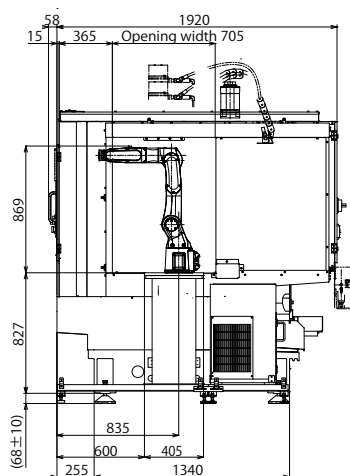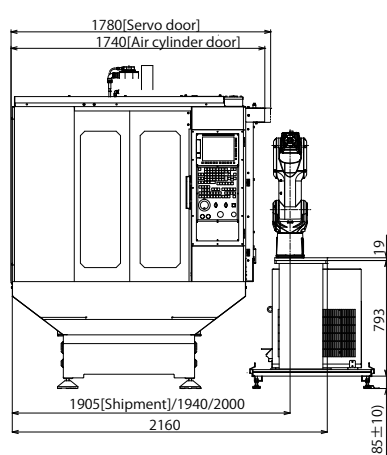

- * In the figure, LR Mate 200iD/7L is mounted.
- * For further details, please contact FANUC.

Specification

Item		Detail	
		Side integrated type	Side standalone type
Specifications	ROBODRILL	α -DiB Plus series (X-axis stroke 300mm)	α -DiB Plus series (X-axis stroke 500mm)
	Robot	LR Mate 200iD LR Mate 200iD/7L LR Mate 200iD/14L	
	Robot controller	R-30iB Mate Plus controller	
Automatic door (side) drive type		Air cylinder (controlled by ROBODRILL) Servo motor (controlled by Robot)	
Mass	Robot	25 kg / 27 kg / 27 kg (installed on the robot base)	
	Robot base	80 kg (fixed on ROBODRILL)*1	500 kg (put on floor)*2
Power source	Power supply	Power for Robot is supplied from ROBODRILL. (Power supply capacity of ROBODRILL +1.2kVA) For detail, refer to the installation information of ROBODRILL.	
	Compressed air supply	Air for Robot is supplied from ROBODRILL. Additional source is not necessary for handling use.	

※1: Mass of safety fence and Robot controller are not included. (separately placed on floor)

 
※2: Mass of safety fence and Robot controller are included. (fixed on the base)

Option

ROBOGUIDE (PC software)

- Support tool that enables from design to verification of robot application systems easily and accurately.
- System layout including peripheral devices can be designed.
- Teaching, programming and simulation are available on graphic screen.
- Setup time can be shortened in combination with sample programs of **ROBORILL Robot Package**.

* For further details, refer to **ROBOGUIDE** catalogue.

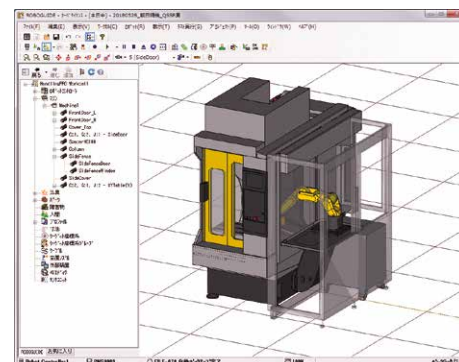

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81
Россия +7(495)268-04-70

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47
Казахстан +7(7172)727-132

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35
Киргизия +996(312)96-26-47

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

<https://fanuc.nt-rt.ru/> || fcu@nt-rt.ru